

Tata Refuse compactor

Sl no	Spare parts	Qty	Price	Charge
1	TATA Refuse Compactor Spare parts, Air Filter	No	3300	180
2	TATA Refuse Compactor Spare parts, Brake Shoe	Set	6800	700
3	TATA Refuse Compactor Spare parts, Brake Pad	Set	4800	700
4	TATA Refuse Compactor Spare parts, Hub Bearing F Inner	No	3880	880
5	TATA Refuse Compactor Spare parts, Hub Bearing F Outer	No	3880	880
6	TATA Refuse Compactor Spare parts, Hub Oil Seal	No	650	350
7	TATA Refuse Compactor Spare parts, Tube Oil Seal	No	380	350
8	TATA Refuse Compactor Spare parts, Brake Disc	No	12500	980
9	TATA Refuse Compactor Spare parts, Hub Check Nut	No	680	120
10	TATA Refuse Compactor Spare parts, Check Nut Lock	No	380	120
11	TATA Refuse Compactor Spare parts, Hub Splender	No	12500	1800
12	TATA Refuse Compactor Spare parts, Shock Absorber Front	No	3880	550
13	TATA Refuse Compactor Spare parts, Shock Absorber Rear	No	3180	550
14	TATA Refuse Compactor Spare parts, Shock Absorber Bush	No	280	120
15	TATA Refuse Compactor Spare parts, Stabilizer Bar Bush Front	No	280	350
16	TATA Refuse Compactor Spare parts, Stabilizer Bar Bush Rear	No	280	320
17	TATA Refuse Compactor Spare parts, Link Bush Front	No	280	450
18	TATA Refuse Compactor Spare parts, Link Bush Rear	No	280	450
19	TATA Refuse Compactor Spare parts, Spring Main Rear	No	3850	1280
20	TATA Refuse Compactor Spare parts, 2ND	No	3850	1050
21	TATA Refuse Compactor Spare parts, 3RD	No	3850	820
22	TATA Refuse Compactor Spare parts, 4TH	No	2580	700
23	TATA Refuse Compactor Spare parts, 5TH	No	2080	550
24	TATA Refuse Compactor Spare parts, Spring Main Front	No	3100	920
25	TATA Refuse Compactor Spare parts, 2ND	No	3100	820
26	TATA Refuse Compactor Spare parts, 3RD	No	3080	440
27	TATA Refuse Compactor Spare parts, 4TH	No	3000	350
28	TATA Refuse Compactor Spare parts, 5TH	No	2650	280
29	TATA Refuse Compactor Spare parts, Spring Bush Small	No	950	250
30	TATA Refuse Compactor Spare parts, Spring Bush Big	No	980	280
31	TATA Refuse Compactor Spare parts, Spring Clamp	No	650	120
32	TATA Refuse Compactor Spare parts, Spring Bush Metal	No	680	650
33	TATA Refuse Compactor Spare parts, Center Bolt	No	350	320
34	TATA Refuse Compactor Spare parts, Fuel Filter	No	3480	280
35	TATA Refuse Compactor Spare parts, Oil Filter	No	3480	280
36	TATA Refuse Compactor Spare parts, Oil (Castrol)	Ltr	480	450
37	TATA Refuse Compactor Spare parts, Oil Mak	Ltr	450	450
38	TATA Refuse Compactor Spare parts, Oil Rimula	Ltr	450	420
39	TATA Refuse Compactor Spare parts, Gear Oil Castrol	Ltr	450	420
40	TATA Refuse Compactor Spare parts, Gear Oil Mak	Ltr	450	420
41	TATA Refuse Compactor Spare parts, Trasmission Oil	Ltr	450	320
42	TATA Refuse Compactor Spare parts, Hyudraulic Oil	Ltr	480	600

43	TATA Refuse Compactor Spare parts, Axle Bearing	No	3880	780
44	TATA Refuse Compactor Spare parts, Axle Oil Seal Inner	No	650	400
45	TATA Refuse Compactor Spare parts, Axle Oil Seal Outer	No	650	400
46	TATA Refuse Compactor Spare parts, Axle Tube Oil Seal	No	680	780
47	TATA Refuse Compactor Spare parts,Rear Differential Assy	No	65000	3300
48	TATA Refuse Compactor Spare parts, Differential Side Bearing	No	3250	1400
49	TATA Refuse Compactor Spare parts, Tail Inner Bearing	No	2880	2100
50	TATA Refuse Compactor Spare parts, Tail Outer Bearing	No	2880	2100
51	TATA Refuse Compactor Spare parts, Tail Oil Seal	No	680	750
52	TATA Refuse Compactor Spare parts, Crown & Tail Assy	Set	88000	2700
53	TATA Refuse Compactor Spare parts,Ball Joint Upper	No	6500	1800
54	TATA Refuse Compactor Spare parts, Ball Joint Lower	No	6500	1800
55	TATA Refuse Compactor Spare parts, Arm Lower	No	4500	750
56	TATA Refuse Compactor Spare parts, Arm Upper	No	4500	750
57	TATA Refuse Compactor Spare parts, Arm Bush Lower	No	1580	480
58	TATA Refuse Compactor Spare parts, Arm Bush Upper	No	1580	480
59	TATA Refuse Compactor Spare parts, Brake Hose Front	No	3100	380
60	TATA Refuse Compactor Spare parts, Brake Hose Rear	No	2200	380
61	TATA Refuse Compactor Spare parts, Back Light	No	2880	480
62	TATA Refuse Compactor Spare parts, Back Light Bulb	No	20	150
63	TATA Refuse Compactor Spare parts, Side Light	No	20	160
64	TATA Refuse Compactor Spare parts, Side Light Bulb	No	20	150
65	TATA Refuse Compactor Spare parts, Head Light	No	3580	800
66	TATA Refuse Compactor Spare parts, Head Light Bulb	No	180	250
67	TATA Refuse Compactor Spare parts, Head Gasket	No	3500	4200
68	TATA Refuse Compactor Spare parts, Head Gasket Set	Set	6500	3700
69	TATA Refuse Compactor Spare parts, Water Pump	No	6500	2700
70	TATA Refuse Compactor Spare parts, Fan Belt	No	2850	450
71	TATA Refuse Compactor Spare parts, Power Steering Belt	No	1880	450
72	TATA Refuse Compactor Spare parts, Acc Belt	No	1580	450
73	TATA Refuse Compactor Spare parts, Steering Damper	No	6080	1700
74	TATA Refuse Compactor Spare parts, Steering Relay	No	4800	1550
75	TATA Refuse Compactor Spare parts, Steering Drop Arm	No	3480	1880
76	TATA Refuse Compactor Spare parts, Steering Relay Kit	No	2200	1880
77	TATA Refuse Compactor Spare parts, Brake Bucket Kit	No	450	750
78	TATA Refuse Compactor Spare parts, Wheel Cylinder Assy	No	3850	850
79	TATA Refuse Compactor Spare parts, Feed Pump	No	6800	450
80	TATA Refuse Compactor Spare parts, Fuel Supply Pump	No	6780	2200
81	TATA Refuse Compactor Spare parts, Fuel Totter & Head	Set	3580	2700
82	TATA Refuse Compactor Spare parts, Delivery Valve	Set	2200	300
83	TATA Refuse Compactor Spare parts, Oil Supply Pump	Set	8800	1900
84	TATA Refuse Compactor Spare parts, Valve Oil Seal	Set	650	900
85	TATA Refuse Compactor Spare parts, Clutch Plate	Set	8500	1880
86	TATA Refuse Compactor Spare parts, Pressure Plate	No	8500	1560
87	TATA Refuse Compactor Spare parts, Release Bearing	No	3350	1380
88	TATA Refuse Compactor Spare parts, Master Cylinder Kit	No	2880	980
89	TATA Refuse Compactor Spare parts, Master Cylinder	No	4580	980

90	TATA Refuse Compactor Spare parts, Clutch Cylinder Upper	No	3580	700
91	TATA Refuse Compactor Spare parts, Clutch Cylinder Lower	No	3550	700
92	TATA Refuse Compactor Spare parts, Brake Booster	No	18800	3200
93	TATA Refuse Compactor Spare parts, Cross Bearing	No	3580	450
94	TATA Refuse Compactor Spare parts, Link	No	2600	300
95	TATA Refuse Compactor Spare parts, C V Joint	No	19800	1700
96	TATA Refuse Compactor Spare parts, Drive Shaft Assy	No	19800	1700
97	TATA Refuse Compactor Spare parts,Rear Spring Shackel	No	2580	750
98	TATA Refuse Compactor Spare parts, Tie Rod End Small	No	1120	650
99	TATA Refuse Compactor Spare parts, Tie Rod End Big	No	1150	680
100	TATA Refuse Compactor Spare parts, Tie Rod End	Set	1250	700
101	TATA Refuse Compactor Spare parts, King Pin Bearing	Set	1350	480
102	TATA Refuse Compactor Spare parts, King Pin Kit	Set	680	580
103	TATA Refuse Compactor Spare parts, Radiator Cap	Set	680	100
104	TATA Refuse Compactor Spare parts, Wheel Nuts & Bolts	No	650	750
105	TATA Refuse Compactor Spare parts, Self Armature	No	4500	1300
106	TATA Refuse Compactor Spare parts, Self Carbon	No	2550	1450
107	TATA Refuse Compactor Spare parts, Self Carnon Rocker	No	1280	800
108	TATA Refuse Compactor Spare parts, Self Plunger	No	980	550
109	TATA Refuse Compactor Spare parts, Timing Belt	No	2650	2700
110	TATA Refuse Compactor Spare parts, Glow Plug	No	1280	1300
111	TATA Refuse Compactor Spare parts, Engine Mounting	No	2450	1750
112	TATA Refuse Compactor Spare parts, Gear Box Mounting	No	2800	1400
113	TATA Refuse Compactor Spare parts, Wiper Blade	No	680	220
114	TATA Refuse Compactorx Spare parts, Battery	No	14500	280
115	TATA Refuse Compactor Spare parts, Brake Oil	Ltr	480	50
116	TATA Refuse Compactor Spare parts, Power Steering Oil	Ltr	480	60
117	TATA Refuse Compactor Spare parts, Key Lock Set	Set	4850	1800
118	TATA Refuse Compactor Spare parts, Parking Cable Rear	No	2880	1300
119	TATA Refuse Compactor Spare parts, Parking Cable Front	No	2580	1280
120	TATA Refuse Compactor Spare parts, Accelator Cabel	No	850	450
121	TATA Refuse Compactor Spare parts, Km Cable	No	2650	750
122	TATA Refuse Compactor Spare parts, Rear Axle Corn	No	2250	880
123	TATA Refuse Compactor Spare parts, Spring Pad	No	1280	800
124	TATA Refuse Compactor Spare parts, Piston	Set	1880	2700
125	TATA Refuse Compactor Spare parts, Piston Ring	Set	1580	2700
126	TATA Refuse Compactor Spare parts, Linner	Set	4550	4200
127	TATA Refuse Compactor Spare parts, Intake Valve	Set	3200	1400
128	TATA Refuse Compactor Spare parts, Exhuast Valve	Set	1280	1400
129	TATA Refuse Compactor Spare parts, Vale Guide	Set	1380	900
130	TATA Refuse Compactor Spare parts, Vaive Seat	Set	1080	700
131	TATA Refuse Compactor Spare parts, Connecting Bearing	Set	1550	1800
132	TATA Refuse Compactor Spare parts, Main Bearing	Set	1480	1800
133	TATA Refuse Compactor Spare parts, Cam Shaft Bearing	Set	1280	2000
134	TATA Refuse Compactor Spare parts, Thrush Washer	Set	380	450
135	TATA Refuse Compactor Spare parts, Crank Shaft	No	28800	2200
136	TATA Refuse Compactor Spare parts, Connecting Rod	No	3200	780

137	TATA Refuse Compactor Spare parts, Valve Set	Set	4850	880
138	TATA Refuse Compactor Spare parts, Grease	Kg	380	650
139	TATA Refuse Compactor Spare parts, Dhoti	Kg	30	
140	TATA Refuse Compactor Spare parts, Sk Oil	Ltr	60	
141	TATA Refuse Compactor Spare parts, Water Paper	No	9850	
142	TATA Refuse Compactor Spare parts, 4W Yok And Teeth	Set	8080	2000
143	TATA Refuse Compactor Spare parts, 2W Yok And Teeth	Set	8080	2000
144	TATA Refuse Compactor Spare parts, Main Bearing Oil Seal	No	1280	3700
145	TATA Refuse Compactor Spare parts, U-Bolt	No	850	450
146	TATA Refuse Compactor Spare parts, Mobil Filter	No	1250	350
147	TATA Refuse Compactor Spare parts, Diesel Filter	No	3300	350
148	TATA Refuse Compactor Spare parts, CV Joint Assembly	No	19800	700
149	TATA Refuse Compactor Spare parts, Dust Guard	Set	1880	880
150	TATA Refuse Compactor Spare parts, Engine Oil	Ltr	480	350
151	TATA Refuse Compactor Spare parts, Coolant	Ltr	280	120
152	TATA Refuse Compactor Spare parts, Distilled Water	Ltr	150	80
153	TATA Refuse Compactor Spare parts, Bonnet Cable	Set	1650	1700
154	TATA Refuse CompactorS are parts, Hand Brake Cable	Set	3250	1200
155	TATA Refuse Compactor Spare parts, Door Rubber	Set	1650	900
156	TATA Refuse Compactor Spare parts, Safe Guard	Set	4500	1800
157	TATA Refuse Compactor Spare parts, Fog Light	Set	1550	600
158	TATA Refuse Compactor Spare parts, Horn	No	4500	350
159	TATA Refuse Compactor Spare parts, Pop. Shaft-Yoke & Teeth	No	8080	1300
160	TATA Refuse Compactor Spare parts, Fuse	No	20	10
161	TATA Refuse Compactor Spare parts, Wheel Bearing	No	3320	1180